



### SPARE PARTS FOR WIDDER PNEUMATIC SAW (#10267)

ITEM	ORDER #	DESCRIPTION	INCLUDED IN KIT	ITEM	ORDER #	DESCRIPTION	INCLUDED IN KIT	ITEM	ORDER #	DESCRIPTION	INCLUDED IN KIT	ITEM	ORDER #	DESCRIPTION	INCLUDED IN KIT
1	18308	VALVE COVER	B E K	24	18068	CYLINDER PIN	E	48	18008	BEVEL PINION/GEAR SET	C D P	72	18032	HEX NUT	C D Q
2	18309	D-RING	B E I K	25	18065	VANE SET	E F	49	18003	BALL BEARING	C E R	73	18031	SPRING WASHER	C D Q
3	18310	SPRING	B E I	26	18066	ROTOR	E F	50	18005	HELICAL GEAR	-	74	18030	CRANKPIN	C D Q
4	18311	SEAL CUP	B E I	27	18064	FRONT END PLATE	E F	51	18006	KEY	-	75	18033	SLIDE BLOCK	-
5	18312	VALVE SEAL	B E I	28	18005	PINION	E F	52	18004	PINION	-	76	18143-2	CHANNEL	G H
6	18313	VALVE PIN	B E I	29	18063	BALL BEARING	E F	53	18001	GEAR HOUSING	C	77	18057	NUT	G H
7	18314	THROTTLE BODY	B E L	30	18062	LOCK WASHER	E F	54	18164	CAP SCREW	-	78	18143-1	CONNECTING ROD	G H
8	18087	NUT & SCREEN ASS'Y	B E	31	18061	LOCK NUT	E F	55	18160	WASHER	-	79	18274	CAP SCREW	G H
9	18306	D-RING	B E L	32	17990	AIR MOTOR COVER	E R	56	18053	HANDLE	-	80	18035	NUT	H S
10	18315	HANDLE	B E L M	33	18051	CAP SCREW	E R	57	18002	OIL SCREW	C	81	18036	THRUST PLATE	H S
11	18316	RIVET	B E L M	34	18162	NUT	E R	58	18019	CAP SCREW	C	82	18148	PIN	H S
12	18317	THROTTLE SCREW	B E J	35	18059	COLLAR	E R	59	18020	LOCK WASHER	C	83	18328	BOLT	H S
13	18318	D-RING	B E I J	36	18058	FLANGE	E R	60	18018	ECCENTRIC BUSHING	C	84	18049	RIVET	A
14	18319	DRIVE STUD	B E J L N	37	18163	CAP SCREW	E R	61	17888	ROLLER ASS'Y	A C	85	18050	COVER PLATE	A
15	18320	END COUPLING	B E J L N	38	18052	WASHER	E R	62	18041	PIN & RET. SET	A C	86	18323	COVER	A D
16	18321	BEAD CHAIN	B E N	39	18057	NUT	E R	63	18028	RACE & NEEDLE BEARING	C D	87	18055	CAP SCREW	-
17	18077	D-RING	-	40	18017	NUT	C P	64	18027	RETAINING RING	D C	88	18045	FELT GASKET	A
18	18074	AIR MOTOR BODY & INSERT	E	41	18016	GEAR	C P	65	18039	GUIDE PIECE	A C	89	17887	SET SCREW	A D
19	18078	D-RING	-	42	18009	NEEDLE BEARING	C P	66	18024	RETAINING RING	C D	90	18092	BUSHING	A D
20	18072	SCREW	E F	43	18013	BALL SHELL	C P	67	18022	BALL BEARING	C D	91	18048	MOUNT/LOCK ASS'Y	A
21	18071	BALL BEARING	E F	44	18012	BALL SET	C P	68	18023	BEARING PLATE	C D	92	18090	5mm HEX KEY WRENCH	-
22	18069	REAR PLATE	E F	45	18014	NEEDLE BEARING	C P	69	18029	SCREW	C	93	18091	6mm HEX KEY WRENCH	-
23	18067	CYLINDER	E F	46	18011	BALL RACE	C P	70	18025	KEY	C D				
				47	18015	KEY	C P	71	18021	CRANKSHAFT	C D Q				

The following Spare Parts Kits are also available:

KIT LETTER	ORDER #	DESCRIPTION	INCLUDES ITEM #'s	KIT LETTER	ORDER #	DESCRIPTION	INCLUDES ITEM #'s	KIT LETTER	ORDER #	DESCRIPTION	INCLUDES ITEM #'s
A	17886	COVER ASSEMBLY	61, 62, 65, 84, 85, 88, 91 & KIT D	H	18145	CONNECTING ROD ASS'Y WITH LOCK	KIT G, S	O	18324	CRANKSHAFT ASSEMBLY	48(LESS BEVEL PINION) 63, 64, 66, 67, 68, 70 & KIT Q
B	17998	THROTTLE HANDLE COMPONENTS	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16	I	18301	VALVE & SEAL KIT	2, 3, 4, 5, 6, 13	P	18325	BALL SHELL ASSEMBLY	40, 41, 42, 43, 44, 45, 46, 47, 48(LESS BEVEL GEAR)
C	18000	GEAR HEAD ASSEMBLY	49, 53, 57, 58, 59, 60, 61, 62, 65, 69 & KITS D, P	J	18302	THROTTLE SCREW & SEAL ASS'Y	12, 13, 14, 15	Q	18326	CRANK & PIN ASSEMBLY	71, 72, 73, 74
D	18037	GEAR HOUSING COVER ASSEMBLY	66, 89, 90	K	18303	CAP & SEAL	1, 2	R	18327	COVER & FLANGE ASSEMBLY	32, 33, 34, 35, 36, 37, 38, 39, 49
E	18042	AIR MOTOR ASSEMBLY	18, 24 & KITS B, F, R	L	18304	THROTTLE BODY SUB-ASSEMBLY	7, 9, 10, 11, 14, 15	S	18150-1	BLADE LOCKING DEVICE	80, 81, 82, 83
F	18042-1	ROTOR ASSEMBLY	20, 21, 22, 23, 25, 26, 27, 28, 29, 30, 31	M	18305	HANDLE KIT	10, 11				
G	18143	CONNECTING ROD & CHANNEL ASS'Y	76, 77, 78, 79	N	18307	BEAD CHAIN KIT	14, 15, 16				

CG020195